


# Transitions® Signature® GEN 8™ Video Easel Content Upload Instructions

## Using a PC to upload files:

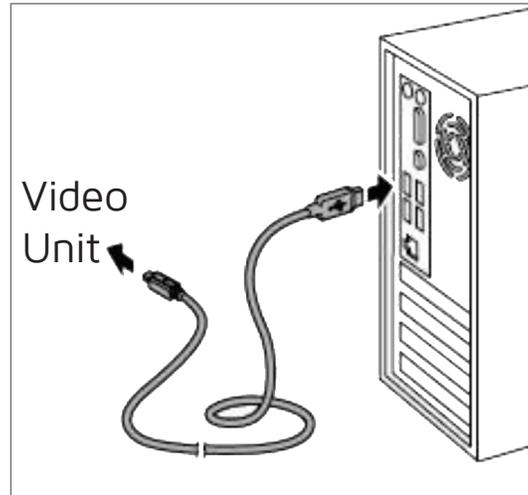


1 Use the previously supplied USB cable, connect the standard USB jack to the computer port




2 Use the mini USB jack connect with the video player's port



3 On PC computer, use file explorer to view the external drive (shown as a USB Drive or Media Drive)

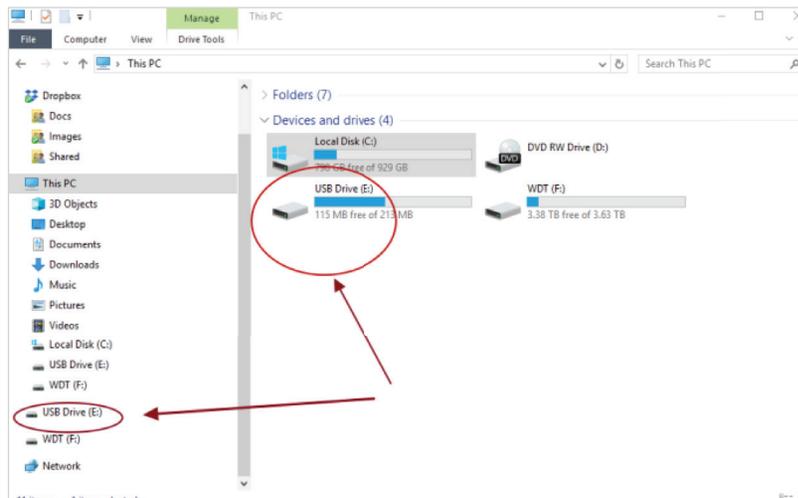

4 Click on the drive, select existing content, and delete them.

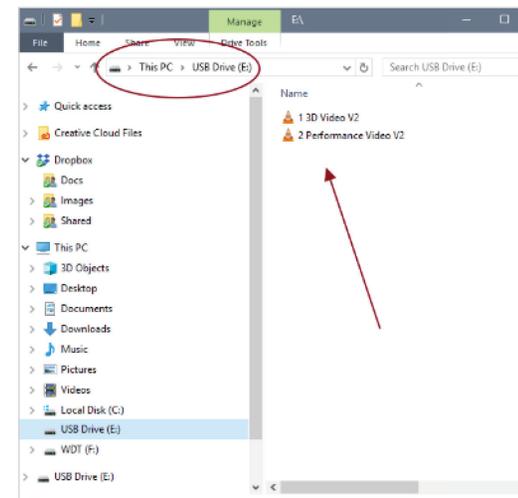

5 Select new video file(s) and copy them into the video player's drive (USB drive)

6 Eject and disconnect, done.

# Transitions® Signature® GEN 8™ Video Easel Content Upload Instructions


## Using a Macintosh to upload files:

1 Launch **Terminal**, found in the Utilities folder. Copy and paste the below into **Terminal** and hit Return:

- “defaults write com.apple.finder AppleShowAllFiles YES”
- “killall Finder”

This will show hidden folders on the Mac

2 Plug in the video brochure to the computer using the previously supplied USB cable

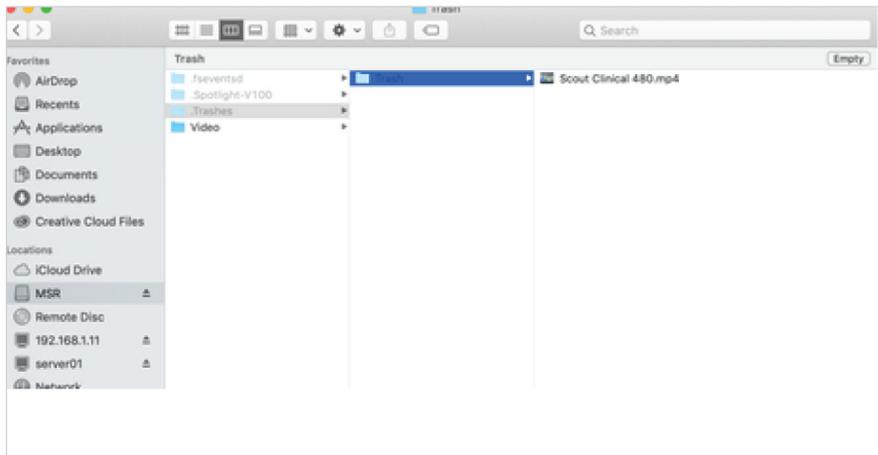

3 Open the drive once it registers, then open the Video folder

4 Select the file and move it to the Trash

5 This should create a **.Trashes** folder on the video brochure, which you will then empty. See attached screenshot. (below)

6 Copy the new video file into the Video folder

7 Once complete you can **Eject** and disconnect from the computer

8 Open the brochure, and it will play

9 When done with this operation, copy and paste the below into **Terminal** and hit Return:

- “defaults write com.apple.finder AppleShowAllFiles NO”
- “killall Finder”

10 This will restore hidden folders back to normal

For additional assistance, contact your Essilor sales consultant.



Transitions™

Crizal®

VARILUX®

Eyezen™

Xperio™